

# Avanti<sup>XP</sup> XL8 Avanti<sup>LC</sup> Avanti 8

## How to set your system and if you wish omit a zone

From DAY mode

**Enter Manager Code**

[?] [?] [?] [?]

**Select Program**

[A]  
[B]  
[\*]

The panel will now set.

To omit a zone press [Z]  
And then the zones you wish to omit

## How to unset your system

**Enter Manager Code**

[?] [?] [?] [?]

The panel is now in DAY.

## How to program chime on any zone

From DAY mode

[🎵]

**Enter Manager Code**

[?] [?] [?] [?]

**Select** [🎵]

**Toggle zones by pressing KEYS 1-8**

[A] To accept  
[B] To abort

Keypad will now give a confirmation beep and the chime zone numbers will be lit

### Quick Set

This feature allows the panel to be **SET** so that it overrides the programmed exit time. Entering an access code, selecting Program **A / B** or **\*** and then pressing [🎵] will cause the panel to **SET** within 2 seconds.

### On board PA

Simultaneously depressing key's **4** and **8** will activate a PA thus creating a full alarm condition. This feature can be used when the system is in DAY mode or SET

### Fault during setting

If the system is unable to **SET** then the internal sounders will make an error tone. The fault on the system will be indicated by the relevant zone/PA/Tamper LED being lit. If a zone LED is lit then ensure that all windows and doors are closed and the zone is clear. If the fault persists then it may be possible to omit the zone.

### System Faults

If after entering your code the Tamper LED is flashing there may be a System fault. Re-enter your code. there are 4 possible faults indicated by the Zone LEDs flashing.

|                |                       |
|----------------|-----------------------|
| Z1 Mains Fail  | Z2 Tel Line Fail (XP) |
| Z3 Battery Low | Z4 Service Due        |

Entering your code again will allow you to override the fault, but you must inform the Engineer.

### Alarm Activation

If the system has been activated then an access code needs to be entered. To reset the system all that is required is to re-enter an access code. If your system is monitored you should contact your engineer to reset the panel.

### Holiday Access Code

The purpose of this code is to allow access to the property whilst the manager is absent. The Holiday Access Code is programmed by the Manager and is only valid until the Manager **USE's** the system. At this point the Holiday Access Code becomes invalid and is no longer accepted by the control panel.

### User Codes

A User can perform the same operations as a Manager **except** they are unable to View the Alarm Log, access the Test Menu.

### Authorize engineer (user)

A User simply enters their access **code** then press **Z** to quit from user access, the engineer will then promptly enter the engineer code. A timer will then start allowing 3 hours engineer access.

Installation Company contact and telephone No

## How to view the alarm log

From DAY mode 

**Enter Manager Code**

**Enter**

After selecting Alarm Log the zone, PA and Tamper LED's will show the latest event

A flashing LED indicates the zone that was first activated.

Any other LED lit was activated after the first event but before system unset.

1  2  3  4  5  6  7  8

Day

PA

Tamper

Jump to oldest event

Move one event older

Move one event newer

Jump to newest event

Manager menu

## How to authorise Engineer access

From DAY mode 

**Enter Manager Code**

**Enter**

**Followed by**

This returns you to DAY & allows 3 hours Engineer access

## How to test your alarm system

From DAY mode 

**Enter Manager Code**

**Enter**  **Test Menu**

Switch bell on

Switch strobe on

Switch speakers on

Switch outputs off

Enter walk test

Exit walk test

Zone status

Manager menu

From DAY mode 

**Enter Manager Code**

**Enter**

Next select code to be changed

User 1 access code

User 2 access code

User 3 access code

User 4 access code

Holiday code

Manager code

Duress code

**Next**

**Enter 4 new digits**

or

**Delete access code**

**Then**

To accept

To abort

Manager menu